



Fjords®

Relaxation Made Beautiful

Modern Living Collection Assembly Instructions



1. All Modern Living Collection recliners are delivered semi-assembled in two boxes.



2. After unboxing first locate the power cables on the bottom of the chair and connect them with each other. For further explanation on the battery and direct power options for Modern Living Furniture, please see our video entitled "Modern Living Battery"



3. The back seat cushion is now ready to be installed. Notice the connection points for mounting.



4. Remove the pins on either side of the connecting rod. Keep them for later. Then remove the connecting rod.



Fjords®


Relaxation Made Beautiful

Modern Living Collection Assembly Instructions



- 5.** Place backseat cushion mounting bracket around the center attachment. Re-insert connecting rod and secure pins.

For easier results, it is best to use two people to complete this step.

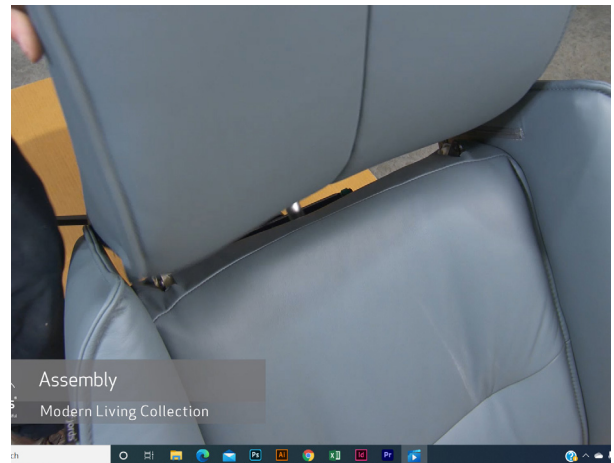


- 6.** Ensure that each of the side brackets are inserted into each other. You can feel then connection points by feeling in between the cushions.



- 7.** Apply pressure to ensure that you have fully inserted the connection clips. You should hear a slight clicking sound when completed. Repeat for opposite side.

It is very important that you test out the chair to make certain that the back and the seat are securely together before placing the product on the floor our out to delivery.

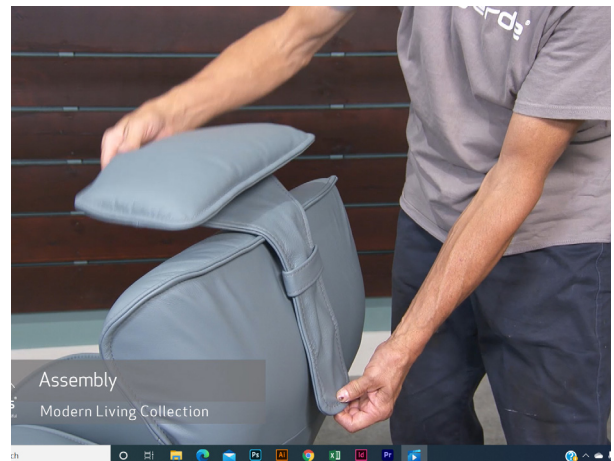

- 8.** For models with the adjustable pillow, place on top of the chair and through the strap.

Make sure you watch our video on direct power versus battery charging before delivery.