
## ADLER KING BED ASSEMBLY INSTRUCTIONS



#### **BOX #1**


A. HEADBOARD B. FOOTBOARD

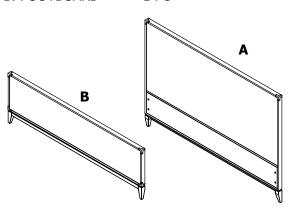




#### **BOX #2**

C. SIDE RAIL 2 PCS
D. BED SLAT 5 PCS
E. LEG SUPPORT 10 PCS
BED HARDWARE BOX\*

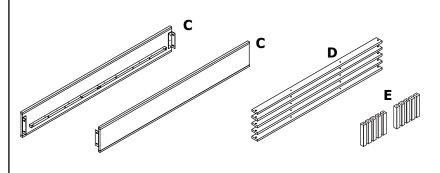

#### ADLER BED ASSEMBLED

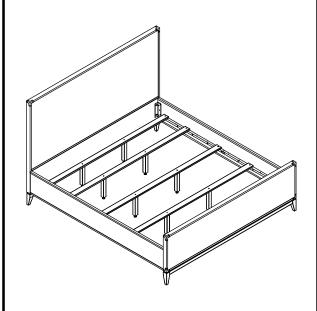

#### **BED HARDWARE PACKED IN BOX #2**

1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	SPRINGWASHER (M8)	8 PCS	3	FLAT WASHER (M8)	8 PCS		
E Dange										
4	ALLEN BOLT (6x40mm)	11 PCS	5	WOOD SCREW (8x30mm)	11 PCS	6	ALLEN KEY	1 PC		
			807 Marian							

**TOOL REQUIRED**: PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)


YOUR BOX MAY CONTAIN EXTRA HARDWARE









**STEP 1:** 

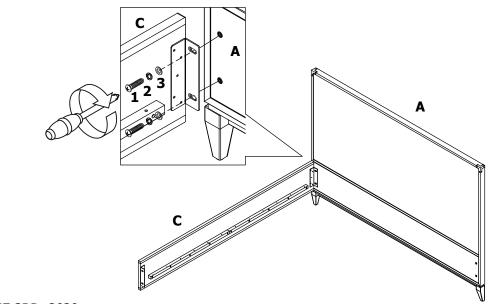

#### **STEP 2:**



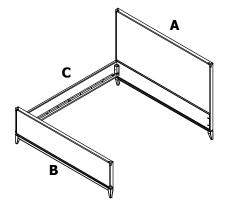


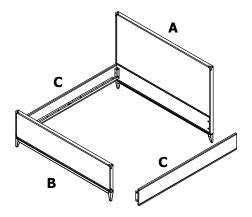



#### **STOP**

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

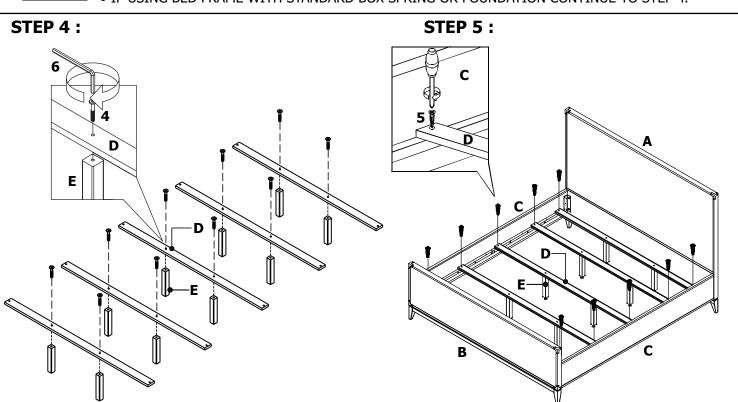


## INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH LEG SUPPORT (**E**).

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE BED SLAT.

UPDATED: JUNE 3RD, 2020

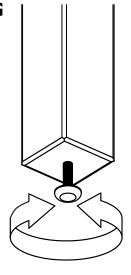

#### **MAINTENANCE INSTRUCTIONS:**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

#### ADLER KING BED

#### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT 5 PCS E. LEG SUPPORT 10 PCS

4. ALLEN BOLT (6x40mm) 11 PCS 5. WOOD SCREW (8x30mm) 11 PCS

#### STEP 1:

USE ALLEN KEY **(6)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

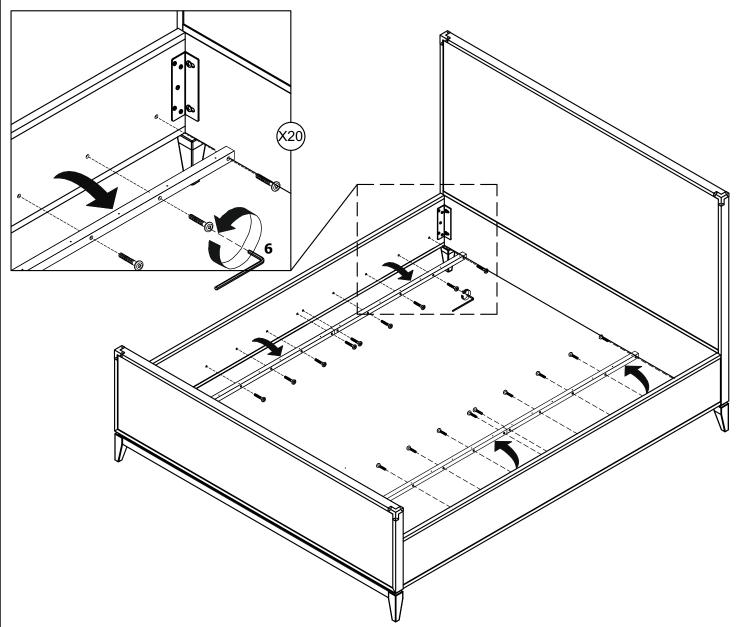


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

# ADLER FULL / QUEEN BED ASSEMBLY INSTRUCTIONS




#### **BOX #1**

A. HEADBOARD 1 PC B. FOOTBOARD 1 PC

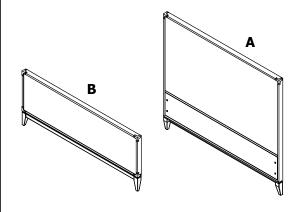


#### **BOX #2**

C. SIDE RAIL 2 PCS
D. BED SLAT 5 PCS
E. LEG SUPPORT 5 PCS
BED HARDWARE BOX\*

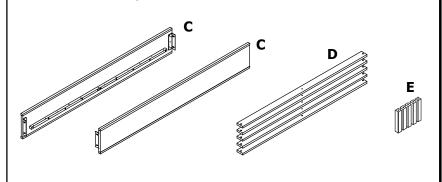

#### ADLER BED ASSEMBLED

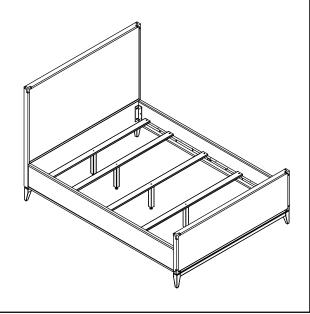

#### **BED HARDWARE PACKED IN BOX #2**

ı										
	1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	SPRINGWASHER (M8)	8 PCS	3	FLAT WASHER (M8)	8 PCS	
	4	ALLEN BOLT (6x40mm)	6 PCS	5	WOOD SCREW (8x30mm)	11 PCS	6	ALLEN KEY	1 PC	
				800 million						

**TOOL REQUIRED**: PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)


YOUR BOX MAY CONTAIN EXTRA HARDWARE









#### **STEP 1:**

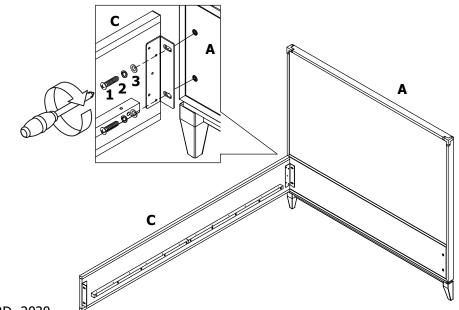

#### **STEP 2:**

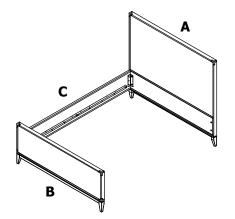

#### **STEP 3:**

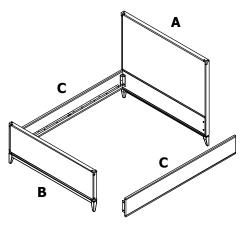





#### **STOP**

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

#### **STEP 4:**

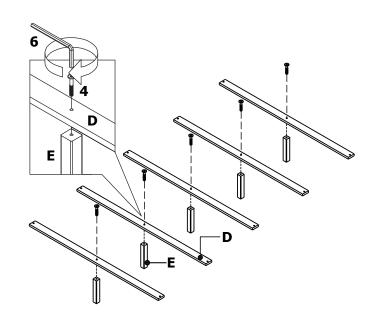

#### **STEP 5:**

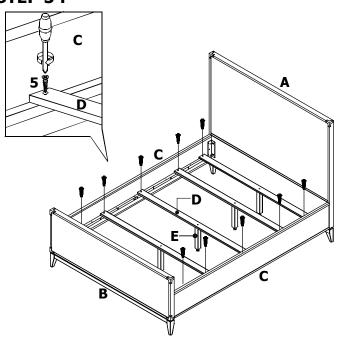


## INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH LEG SUPPORT (**E**).

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE BED SLAT.

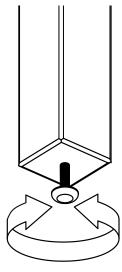

#### **MAINTENANCE INSTRUCTIONS:**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

### ADLER FULL / QUEEN BED

#### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT 5 PCS

4. ALLEN BOLT (6x40mm) 6 PCS


E. LEG SUPPORT

5 PCS

5. WOOD SCREW (8x30mm) 11 PCS

#### STEP 1:

USE ALLEN KEY (6) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

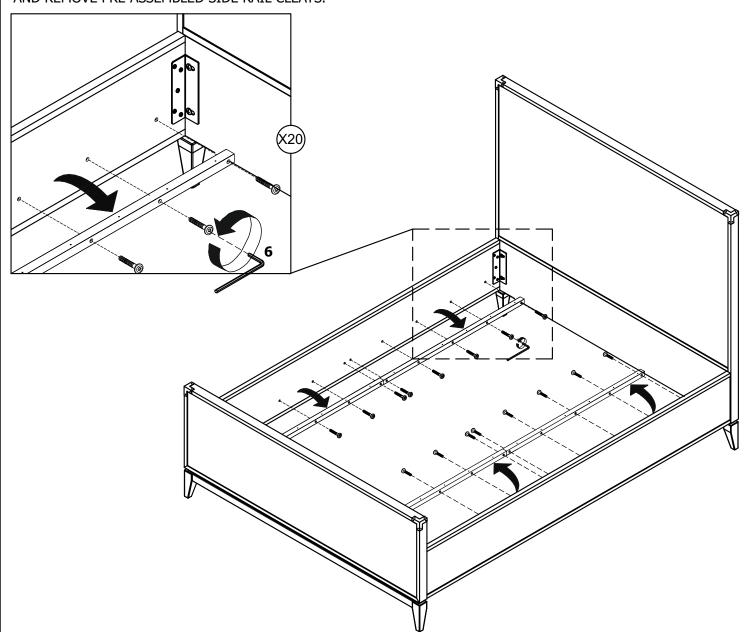

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.